




## Wire Pinouts for Sensor Pods A1-01 • A1-04 • A1-07

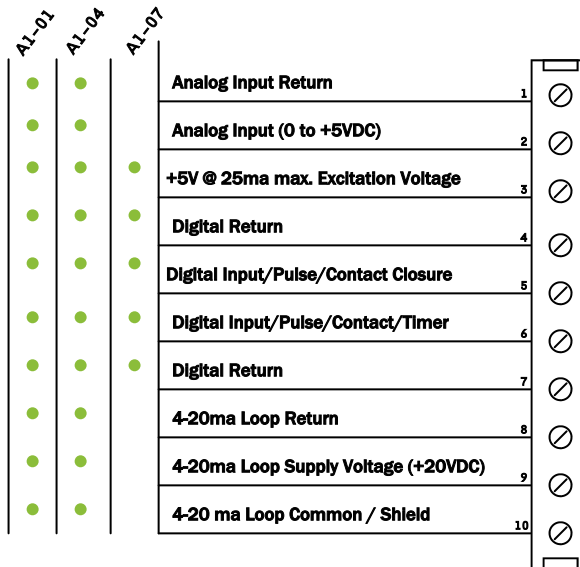

460 Ward Drive  
Santa Barbara, CA 93111  
[www.accsense.com](http://www.accsense.com)

Toll Free: 866.670.3500  
Local: 805.681.3500  
Fax: 805.681.3501  
Email: [info@accsenseinc.com](mailto:info@accsenseinc.com)