



*Wire Pinouts for Sensor Pods
A1-08*

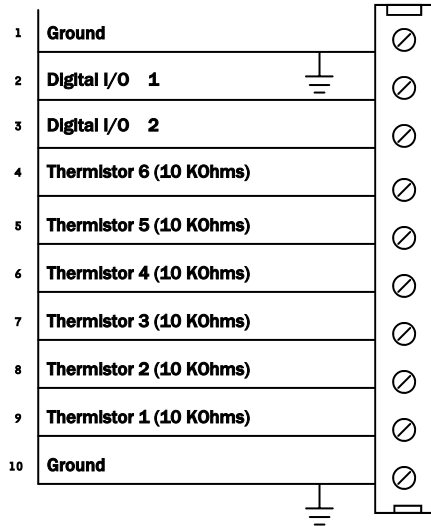

460 Ward Drive
Santa Barbara, CA 93111
www.accsense.com

Toll Free: 866.670.3500
Local: 805.681.3500
Fax: 805.681.3501
Email: info@accsenseinc.com

*Wire Pinouts for Sensor Pods
A1-09*

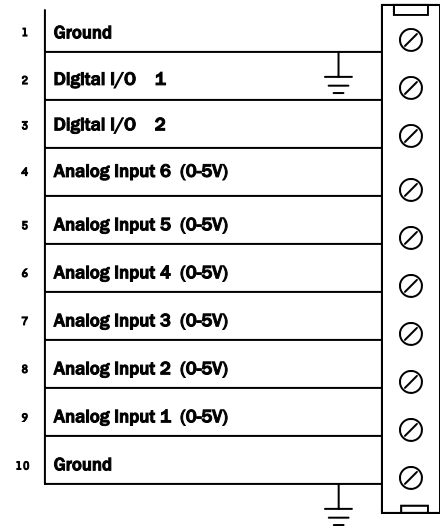

460 Ward Drive
Santa Barbara, CA 93111
www.accsense.com

Toll Free: 866.670.3500
Local: 805.681.3500
Fax: 805.681.3501
Email: info@accsenseinc.com